

MaxRace F-1 v.4 update file instruction

By using the window XP 32 bit instance:

1. Go to Maxbuy's website (<http://www.maxbuy.cc>) to download the latest MaxRace F-1 v.4 for XP 32 bit zip file and unpack it.

UPDATER86.msi for Win2000/XP/Vista/Win7/win8 32bit


UPDATER64.msi for Win2000/XP/Vista/Win7/win8 64bit


2. Double click "UPDATER86.msi" MAX UPDATER Setup Wizard will appear. (as shown in the picture below)

3. Click "Next"




4. Click "Next"

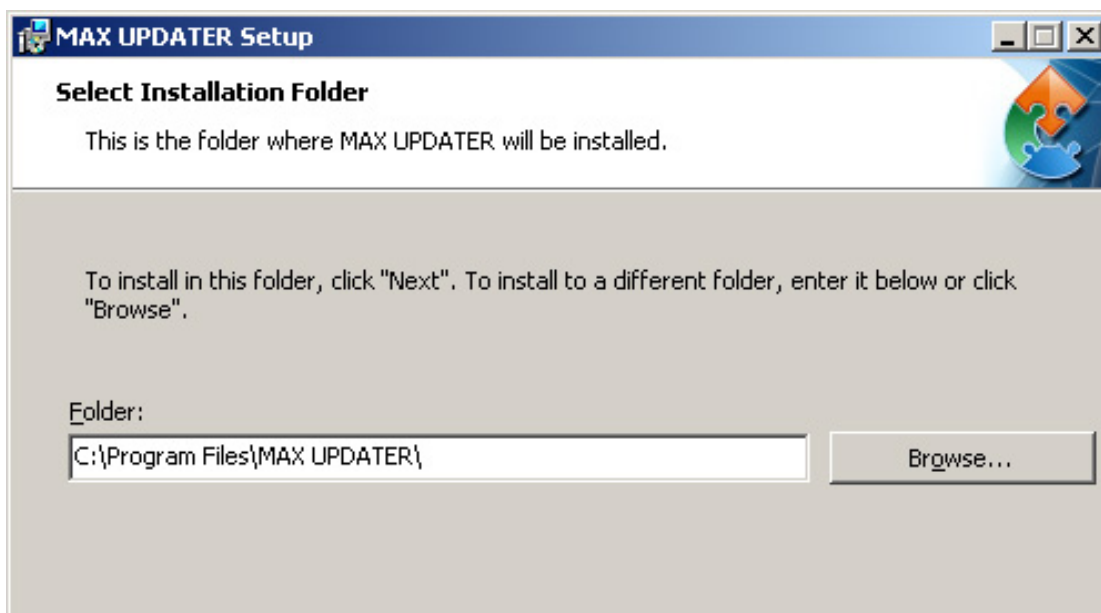

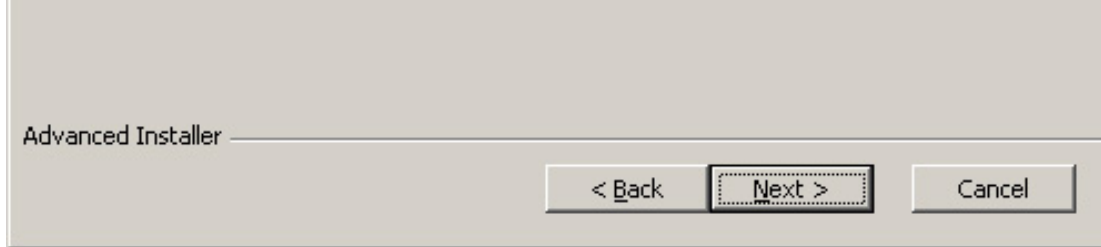


5. Click "Install"

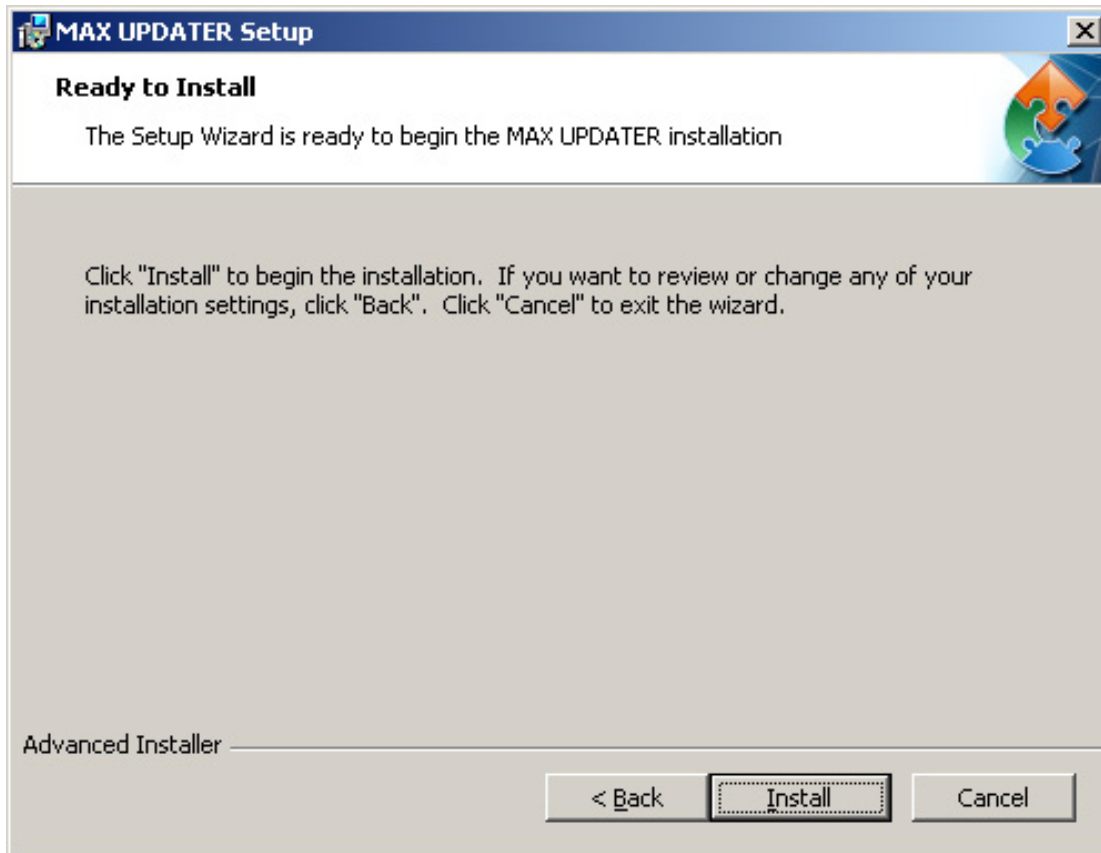

6. Click "Continue Anyway".



7. Click "OK"

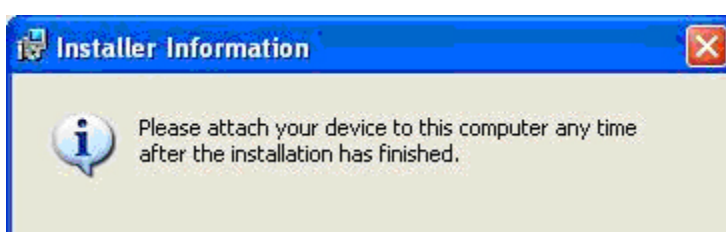




8. Click "Finish". The MAX UPDATER Setup Wizard is complete.



9. Press and hold the "-" key on MaxRace F-1 v.4, then connect to PC. After connecting adapter to the PC, release the "-" key. When the PC has found the new hardware, it will pop up the following window as shown below. Now select "No, not this time", then click "Next".




10. Select "Install the software automatically (Recommended)" and click "Next"

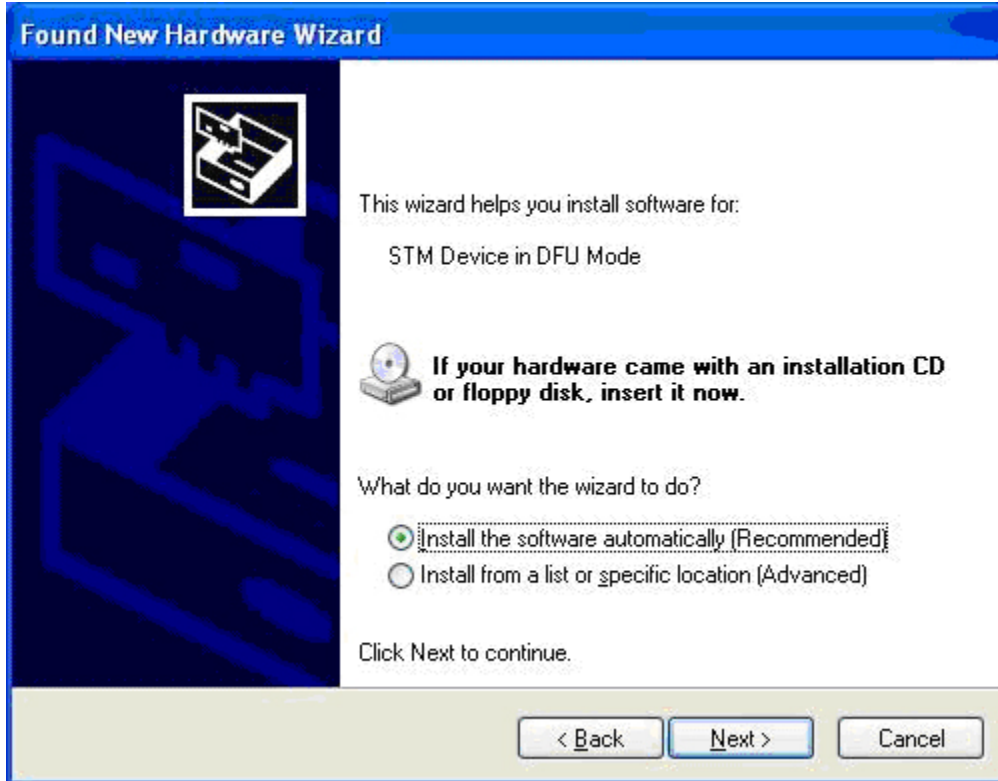


### 11. Click "Continue Anyway"



### 12. Click "Finish". The driver is now installed.

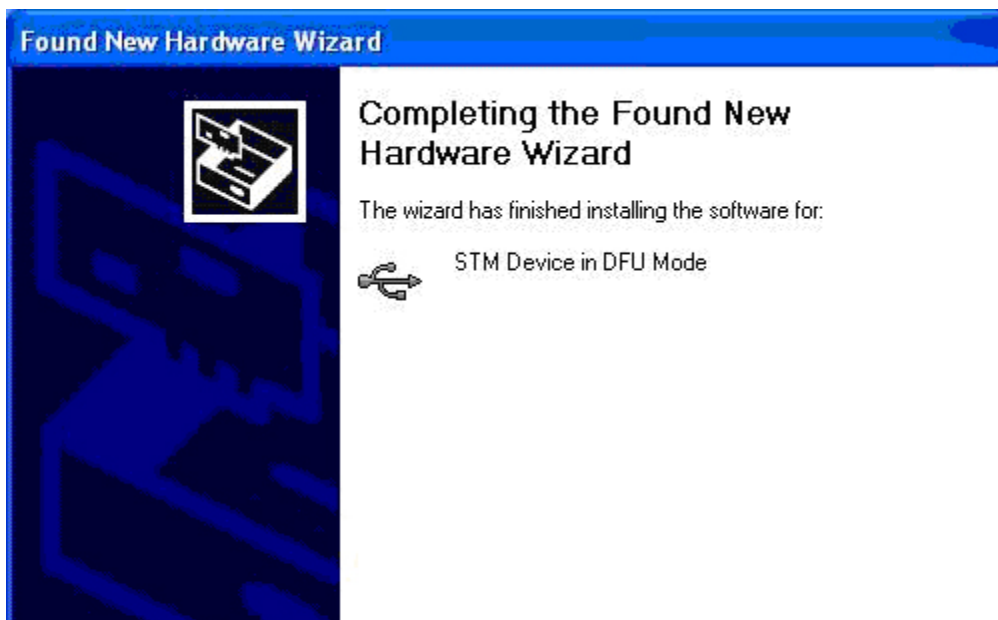

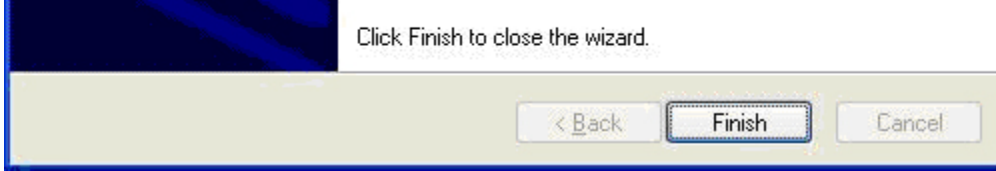

13. To install the latest firmware upgrade to MaxRace F-1 v.4, open the upgrade software "MAX Updater.exe" to enter the update interface. Click on the "Choose" icon to select the dfu file "\*\*\*\*\*.dfu ". Now click on the "Upgrade" icon to start upgrade process. Wait until the **Progress** bar is completed (Verify successful). The upgrade takes about 10 seconds and during the upgrade period please DO NOT UNPLUG the MaxRace F-1 v.4 or turn off the PC. Once complete, the firmware upgrade is successful and ready for you to start using.

